



■ The sensor can be reset to its facto-

→ In normal operating mode shortly

Each time you tap push-button T1 the

actual settings of the analogue output

push T1. The LED display shows

ry setting«, Diagram 3.

Show parameters

are shown.

ry setting, see »Key lock and facto-



Operating Manual

mic+ Ultrasonic Sensors with one switching output

mic+25/D/TC mic+35/D/TC mic+130/D/TC mic+340/D/TC mic+600/D/TC

mic+25/E/TC mic+35/E/TC mic+130/E/TC mic+340/E/TC mic+600/E/TC

Product description

- The mic+ sensor with one switching output measures the distance to an object within the detection zone contactless. Depending on the adjusted detect distance the switching output is set.
- All settings are done with two pushbuttons and a three-digit LED-display (TouchControl).
- Three-colour LEDs indicate the switching status.
- The output functions are changeable from NOC to NCC.
- The sensors are adjustable manually via TouchControl or via Teach-in procedure.
- Useful additional functions are set in the Add-on-menu.
- Using the LinkControl adapter (optional accessory) all TouchControl and additional sensor parameter

Start here

T1 + T2

Ø

For single switching

T1 + T2

Ready

point press T2 until »- - -« is

Diagram 1: Set sensor parameters numerically using LED display

settings can be adjusted by a Windows® Software.

The mic+ sensors have a blind zone in which distance measurement is not possible. The operating range indicates the distance of the sensor that can be applied with normal reflectors with sufficient function reserve. When using good reflectors, such as a calm water surface, the sensor can also be used up to its maximum range. Objects that strongly absorb (e.g. plastic foam) or diffusely reflect sound (e.g. pebble stones) can also reduce the defined operating range.

Safety Notes

Press T1 and T2 simultaneously for about

Choose » [~ « for NCC or

- Read the operating instructions prior to start-up.
- Connection, installation and adjustment works may only be carried out by expert personnel.

■ No safety component in ac- Start-up cordance with the EU Machine Directive, use in the area of personal and machine protection not permitted

Proper Use

mic+ ultrasonic sensors are used for non-contact detection of objects.

Synchronisation

If the assembly distances shown in Fig. 1 for two or more sensors are exceeded the integrated synchronisation should be used. Connect Sync/Comchannels (pin 5 at the units receptable) of all sensors (10 maximum).

	₽	
	∸	D⊶a
mic+25	≥0.35 m	≥2.50 m
mic+35	≥0.40 m	≥2.50 m
mic+130	≥1.10 m	≥8.00 m
mic+340	≥2.00 m	≥18.00 m
mic+600	≥4.00 m	≥30.00 m

Fig. 1: Assembly distances, indicating synchronisation/multinlex

Multiplex mode

The Add-on-menu allows to assign an individual address »01« to »10« to each sensor connected via the Sync/ Com-channel (Pin5). The sensors perform the ultrasonic measurement sequentially from low to high address. Therefore any influence between the sensors is rejected.

The address »00« is reserved to synchronisation mode and deactivates the multiplex mode. To use synchronised mode all sensors must be set to address »00«.

Installation

- → Assemble the sensor at the installation location.
- → Plug in the connector cable to the M12 connector, see Fig. 2.

2 • • 1 3 • 5 • 4	1	colour
1	+U _B	brown
3	−U _B	blue
4	D	black
2	-	white
5	Sync/Com	grey

Fig. 2: Pin assignment with view onto sensor plug and colour coding of the microsonic connection cable

- → Connect the power supply.
- → Set the parameters of the sensor manually via TouchControl (see Fig. 3 and Diagram 1)
- → or use the Teach-in procedure to adjust the detect points (see Diagram 2).

 


Fig. 3: TouchControl/LED display

Factory setting

mic+ sensors are delivered factory made with the following settings:

- Switching output on NOC
- Detecting distance at operating ran-
- Measurement range set to maximum range

Maintenance

mic+ sensors work maintenance free. Small amounts of dirt on the surface do not influence function. Thick layers of dirt and caked-on dirt affect sensor function and therefore must be remo-

Notes

- mic+ sensors have internal temperature compensation. Because the sensors heat up on their own, the temperature compensation reaches its optimum working point after approx. 30 minutes of operation.
- During normal operating mode, a yellow LED D2 signals that the switching output has connected.
- During normal operating mode, the measured distance value is displayed on the LED-indicator in mm (up to 999 mm) or cm (from 100 cm). Scale switches automatically and is indicated by a point on top of the digits.
- During Teach-in mode, the hysteresis loops are set back to factory set-
- If no objects are placed within the detection zone the LED-indicator shows »---«.
- If no push-buttons are pressed for 20 seconds during parameter setting mode the made changes are stored and the sensor returns to normal operating mode.


Contact


Sensor Partners BV


- James Wattlaan 15 5151 DP Drunen The Netherlands
- +31 (0)416 37 82 39
- info@sensorpartners.com
- sensorpartners.com


Sensor Partners BVBA

- Z.1 Researchpark 310 B-1731, Zellik Belgium
- +32 (0)2 464 96 90
- info@sensorpartners.com
- sensorpartners.com

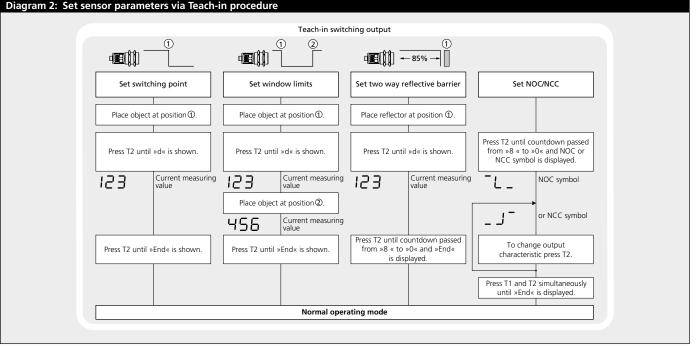

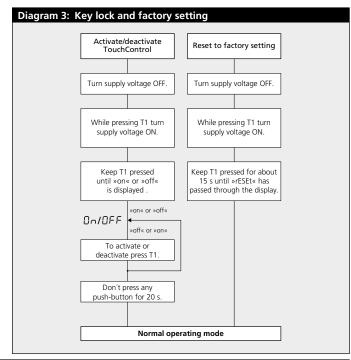

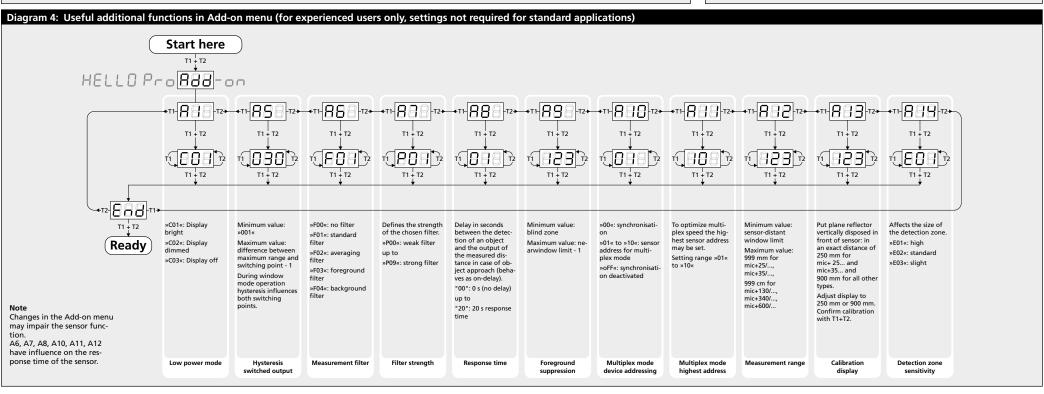

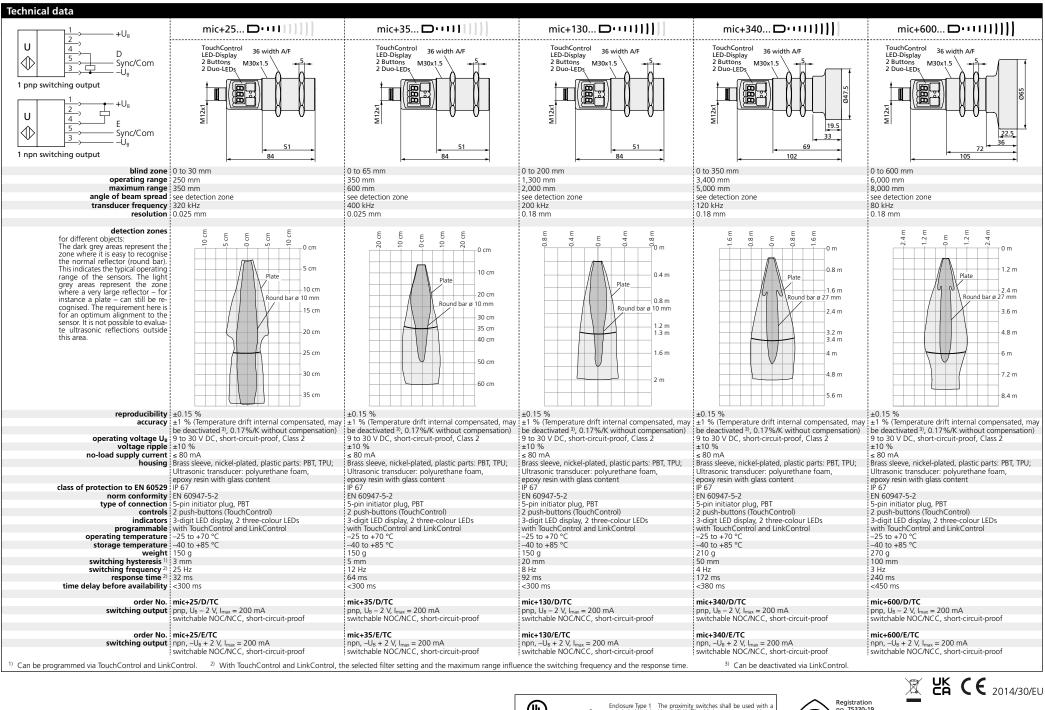



machinery NFPA 79 applications.

Enclosure Type 1 The proximity switches shall be used with a For use only in industrial Listed (CYJV/7) cable/connector assembly rated minimum 32 Vdc, minimum 290 mÅ, in the final installation.



