


SSS-5 General Wiring Diagram




In order to prevent dangerous door movement please configure sensor Dip-SW settings before supplying power to the sensor.

©For more detail on "RELAY OUTPUTS" and "TEST INPUT", please see section 6 of the User Manual.

1. Connecting one SSS-5 sensor to a Door Controller

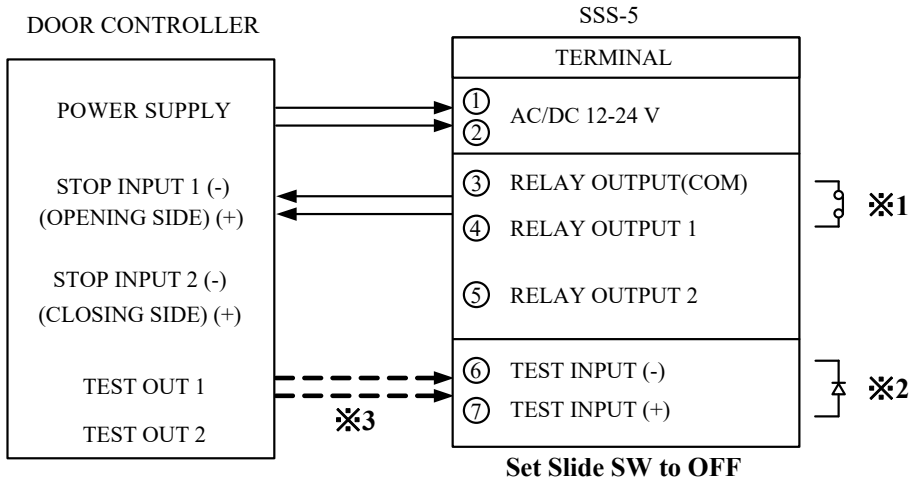

2. Connecting two SSS-5 sensor to a Door Controller

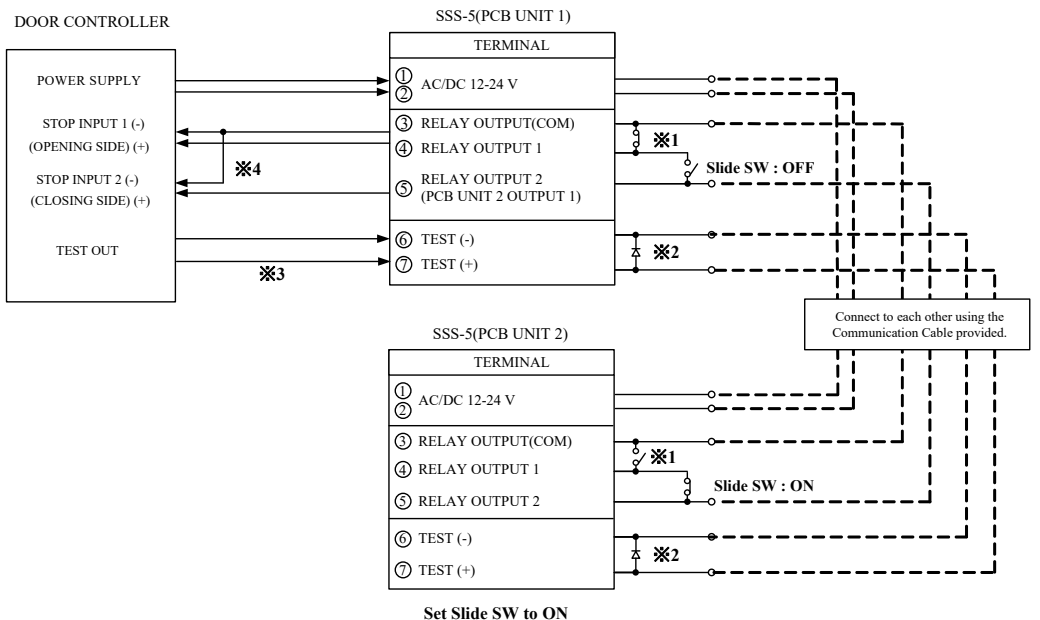

English

- ※1 Dip SW #3: N.C.
- ※2 Dip SW #1: B (with a TEST INPUT) ; Dip SW #1 : A (without a TEST INPUT)
- ※3 In order to comply with EN16005 connect wiring from the TEST OUT on the door controller to TEST INPUT on the SSS-5 sensor. If your door controller cannot monitor the sensor then do not connect these wires.
- ※4 Note polarity when connect wiring.

