





Operating Instructions Ultrasonic proximity switch with one analogue output, one switched output and IO-Link

lpc+15/CFI lpc+25/CFI lpc+35/CFI lpc+100/CFI lpc+15/WK/CFI lpc+25/WK/CFI lpc+35/WK/CFI lpc+100/WK/CFI

Product description

The lpc+ sensor offers a non-contact measurement of the distance to an object which must be positioned within the sensor's detection zone. The switched output is set conditional upon the adjusted detect distance, as an alternative to the set window margins, a distance proportional analogue signal is output.

Via the Teach-in procedure, the detect distance and operating mode can be adjusted. Two LEDs indicate operation and status of the switching and analogue outputs.

The lpc+ sensors are IO-Link-capable in accordance with IO-Link specification V1.1 and support Smart Sensor Profile like Digital Measuring Sensor.

Safety instructions

- Read the operating instructions prior to start-up.
- Connection, installation and adjustments may only be carried out by qualified staff.
- No safety component in accordance with the EU Machine Directive.

Use for intended purpose only lpc+ ultrasonic sensors are used for non-contact detection of objects.

Installation

- Mount the sensor at the place of fitting.
- Connect a connection cable to the M12 device plug, see fig. 1.

Start-up

- Connect the power supply.
- Carry out sensor adjustment in ac cordance with the diagram »Sensor adjustment with the Teach-in procedure«.

Set operation.specific parameters can be locked against changes with the teach-in procedure »Switch on or off Teach-in + Synchronization«

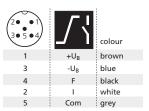


Fig. 1: Pin assignment with view onto sensor plug and colour coding of the microsonic connection cables

Factory setting

- Detect point operation
- Switched output on NOC
- Detect distance at operating range
- Multi-function input »Com« set

to »Teach-in«

- Filter at F01
- Filter strength at P00

Operating modes

Three operating modes are available:

- Operation with one detect point The switched output is set when the object falls below the set detect point.
- Window mode The switched output is set when the object is within the set win-
- Two-way reflective barrier The switched output is set when the object is between sensor and fixed reflector


Contact


Sensor Partners BV

- James Wattlaan 15 5151 DP Drunen The Netherlands
- +31 (0)416 37 82 39
- info@sensorpartners.com
- sensorpartners.com

Sensor Partners BVBA

- Z.1 Researchpark 310 B-1731, Zellik Belgium
- +32 (0)2 464 96 90
- info@sensorpartners.com
- sensorpartners.com

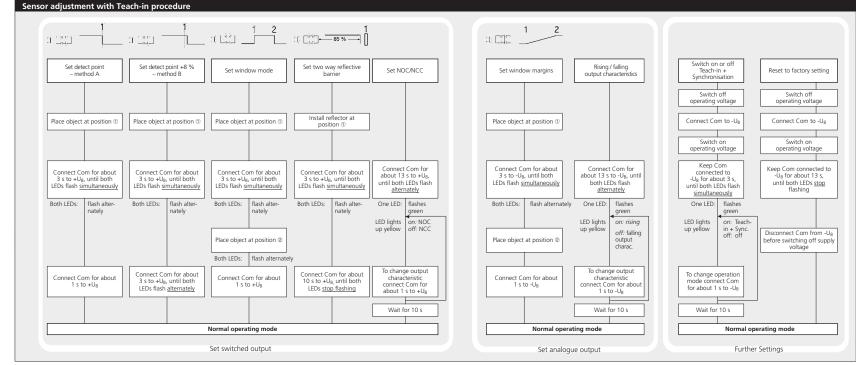

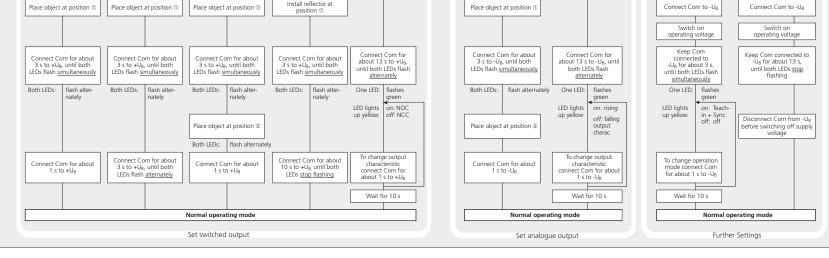

Synchronisation

If under multiple sensor operation the assembly distance falls below the values shown in fig. 2, the internal synchronisation should be used. For this purpose set the switched outputs of all sensors in accordance with the diagram »Sensor adjustment with the Teach-in procedure«.

Then switch-on the multi-function output »Com« (pin 5) to »Teach-in« and »synchronisation« (see »Further settings«).

Finally interconnect each pin 5 of the sensors to be synchronised.

	₽	
	$\dot{\Box}$	D⊶a
D	≥0.25 m	≥1.30 m
D.1111111	≥0.35 m	≥2.50 m
	≥0.40 m	≥2.50 m
	≥0.70 m	≥4.00 m

Fig. 2: Assembly distances

Maintenance

microsonic sensors are maintenancefree. In case of excess caked-on dirt we recommend cleaning the white sensor surface.

Notes

- The sensors of the lpc+ family have a blind zone, within which a distance measurement is not possible.
- The lpc+ sensors are equip-ped with an internal temperature compensation. Due to the sensors self heating, the temperature compensation reaches its optimum work ing-point after approx. 120 seconds of operation.
- In the normal operating mode, an illuminated yellow LED signals that the switched output is switched through.
- The lpc+ sensors have a push-pull switching output.

- In the »Two-way reflective barrier« operating mode, the object has to be within the range of 0-85 % of the set distance.
- In the »Set detect point method A« Teach-in procedure the actual distance to the object is taught to the sensor as the detect point. If the object moves towards the sensor (e.g. with level control) then the taught distance is the level at which the sensor has to switch the output, see. fig. 3.
- If the object to be scanned moves into the detection area from the side, the »Set detect point +8 % method B« Teach-in procedure should be used. In this way the switching distance is set 8 % further than the actual measured distance to the object.

This ensures a reliable switching distance even if the height of the objects varies slightly, see fig. 3.

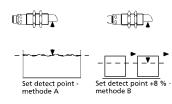


Fig. 3: Setting the detect point for different directions of movement of the object

- The sensor can be reset to its factory setting (see »Further settings«).
- Using the LinkControl adap-ter LCA-2 (optional accessory) and the LinkControl software for Windows, all Teach-in and additional sensor parameter settings can be optionally undertaken.
- The latest IODD file and informtations about start-up and configuration of lpc+ sensors with IO-Link, you will find online at: https://www.microsonic.de/lpc+





2014/30/EU

