





**Operating Instructions** 

# Ultrasonic proximity switch with one switched output

zws-15/CE/OS zws-15/CD/OS zws-24/CD/OS zws-24/CE/OS zws-25/CD/QS zws-25/CE/OS zws-35/CD/OS zws-35/CE/OS zws-70/CD/QS zws-70/CE/QS

### **Product Description**

The zws sensor offers a non-contact measurement of the distance to an object which must be positioned within the sensor's detection zone. The switched output is set in dependence of the adjusted detect distance.

Via the push-button, the detect distance and operating mode can be adjusted (teach-in). Two LEDs indicate operation and the state of the switched output.

## **Safety Notes**

- Read the operating instructions prior to start-up.
- Connection, installation and adjustment works may only be carried out by skilled personnel.
- No safety component in accordance with the EU Machine Directive

#### Proper use

zws ultrasonic sensors are used for non-contact detection of objects.



Fig. 1: Attachment with mounting plate

#### Installation

- Mount the sensor at the installation site with the aid of the enclosed mounting plate, s. Fig. 1. Maximum torque: 0,5 Nm
- Connect a connection cable to the M8 device plug, s. fig. 2.
- Avoid mechanical load on the connector.

#### +U<sub>R</sub> brown 3 -U<sub>R</sub> blue 4 D black Sync white

Fig. 2: Pin assignment with view onto sensor plug and colour coding of the microsonic connection cable

# Start-Up

- Connect the power supply.
- Carry out the adjustment in accordance with the diagram.

# Factory Setting

- Operation with one detect point
- Switched output on NOC
- Detect points at operating range

## Operating modes

Three operating modes are available for the switched output:

- Operation with one detect point The switched output is set if the object falls below the set detect point.
- Window mode

The switched output is set if the object is within the set window mar-

■ Two-way reflective barrier

The switched output is set if the object is between sensor and reflector.

### Synchronization

You can synchronize as many sensors as vou like.

■ Apply a square-wave signal to the sync-input with pulse width ti and repetition rate t<sub>p</sub> (see fig. 3 and technical data)

Any amount of sensors may be synchronized with this external synchro- In normal mode shortly press the

nisation signal.

A high level on sync-input will deactivate the sensor.

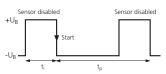


Fig. 3: External synchronization signal

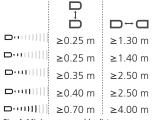


Fig. 4: Minimum assembly distances

#### Checking operation mode

push-button.

The green LED stops shining for one second, then it will show the current operating mode:

 $1 \times flashing = operation with one$ switching point

2 x flashing = window mode

3 x flashing = reflective barrier

After a break of 3 s the green LED shows the output function:

 $1 \times flashing = NOC$ 

 $2 \times flashing = NCC$ 

#### Maintenance

microsonic sensors are maintenancefree. In case of excess caked-on dirt we recommend cleaning the white sensor surface.

#### Notes

- The zws sensor has a blind zone. within which distance measurements are not possible
- In the normal operating mode, an illuminated yellow LED signals the switched output is switched through.
- The standard sensor has no temperature compensation.
- If the object moves towards the sensor, e.g. level control (method A) the detect point can be taught


# Contact


### Sensor Partners BV

- James Wattlaan 15 5151 DP Drunen The Netherlands
- +31 (0)416 37 82 39
- info@sensorpartners.com
- sensorpartners.com

### Sensor Partners BVBA

- Z.1 Researchpark 310 B-1731, Zellik Belgium
- +32 (0)2 464 96 90
- info@sensorpartners.com
- sensorpartners.com

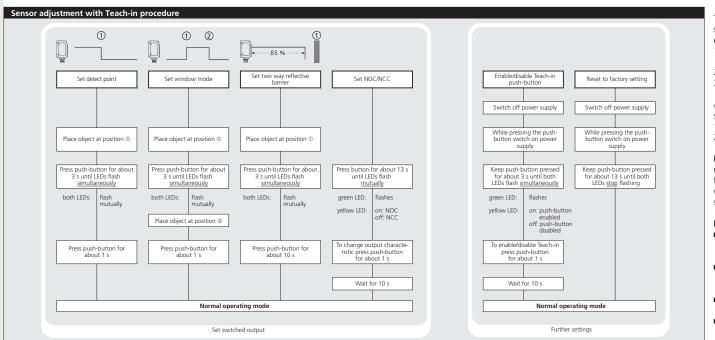

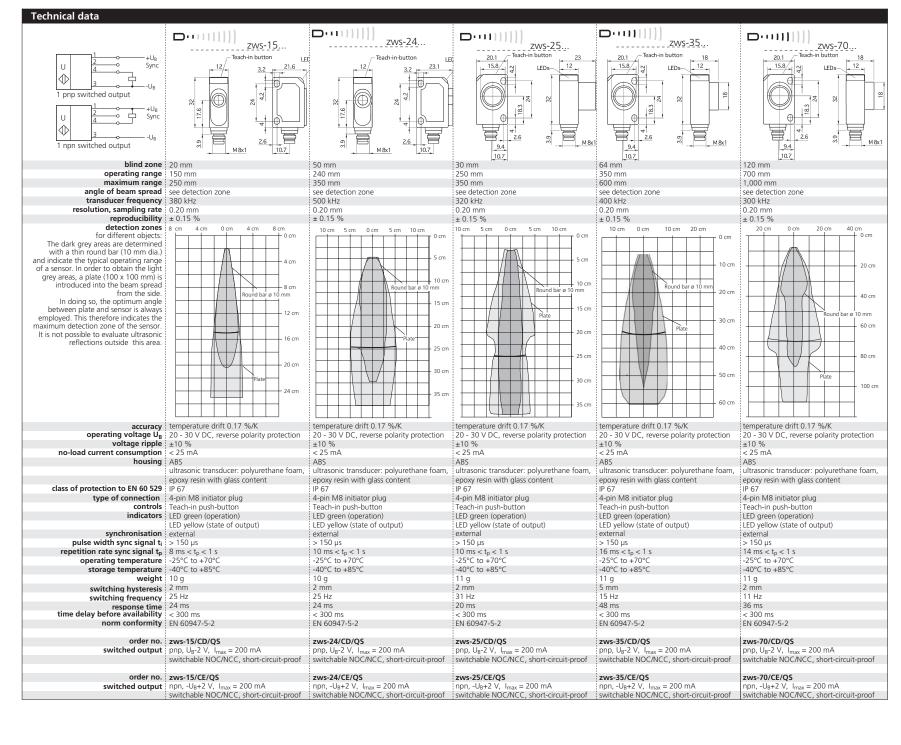

to the actual distance at which the sensor has to switch the output.

If the object to be sensed moves into the detection area from the side (method B), the switching distance should be set 8-10 % further than the desired switch point to obtain a reliable object detection, see fig. 5.

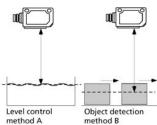


Fig. 5: Set the detect point for different directions of movement of the object

- In the »Two-way reflective barrier« operating mode, the object has to be within the range of 0-85 % of the set distance.
- If the push-button is not pressed for 10 minutes during the Teach-in setting, the settings made hitherto are deleted.
- The sensor can be reset to its factory setting.